

FIG. 1

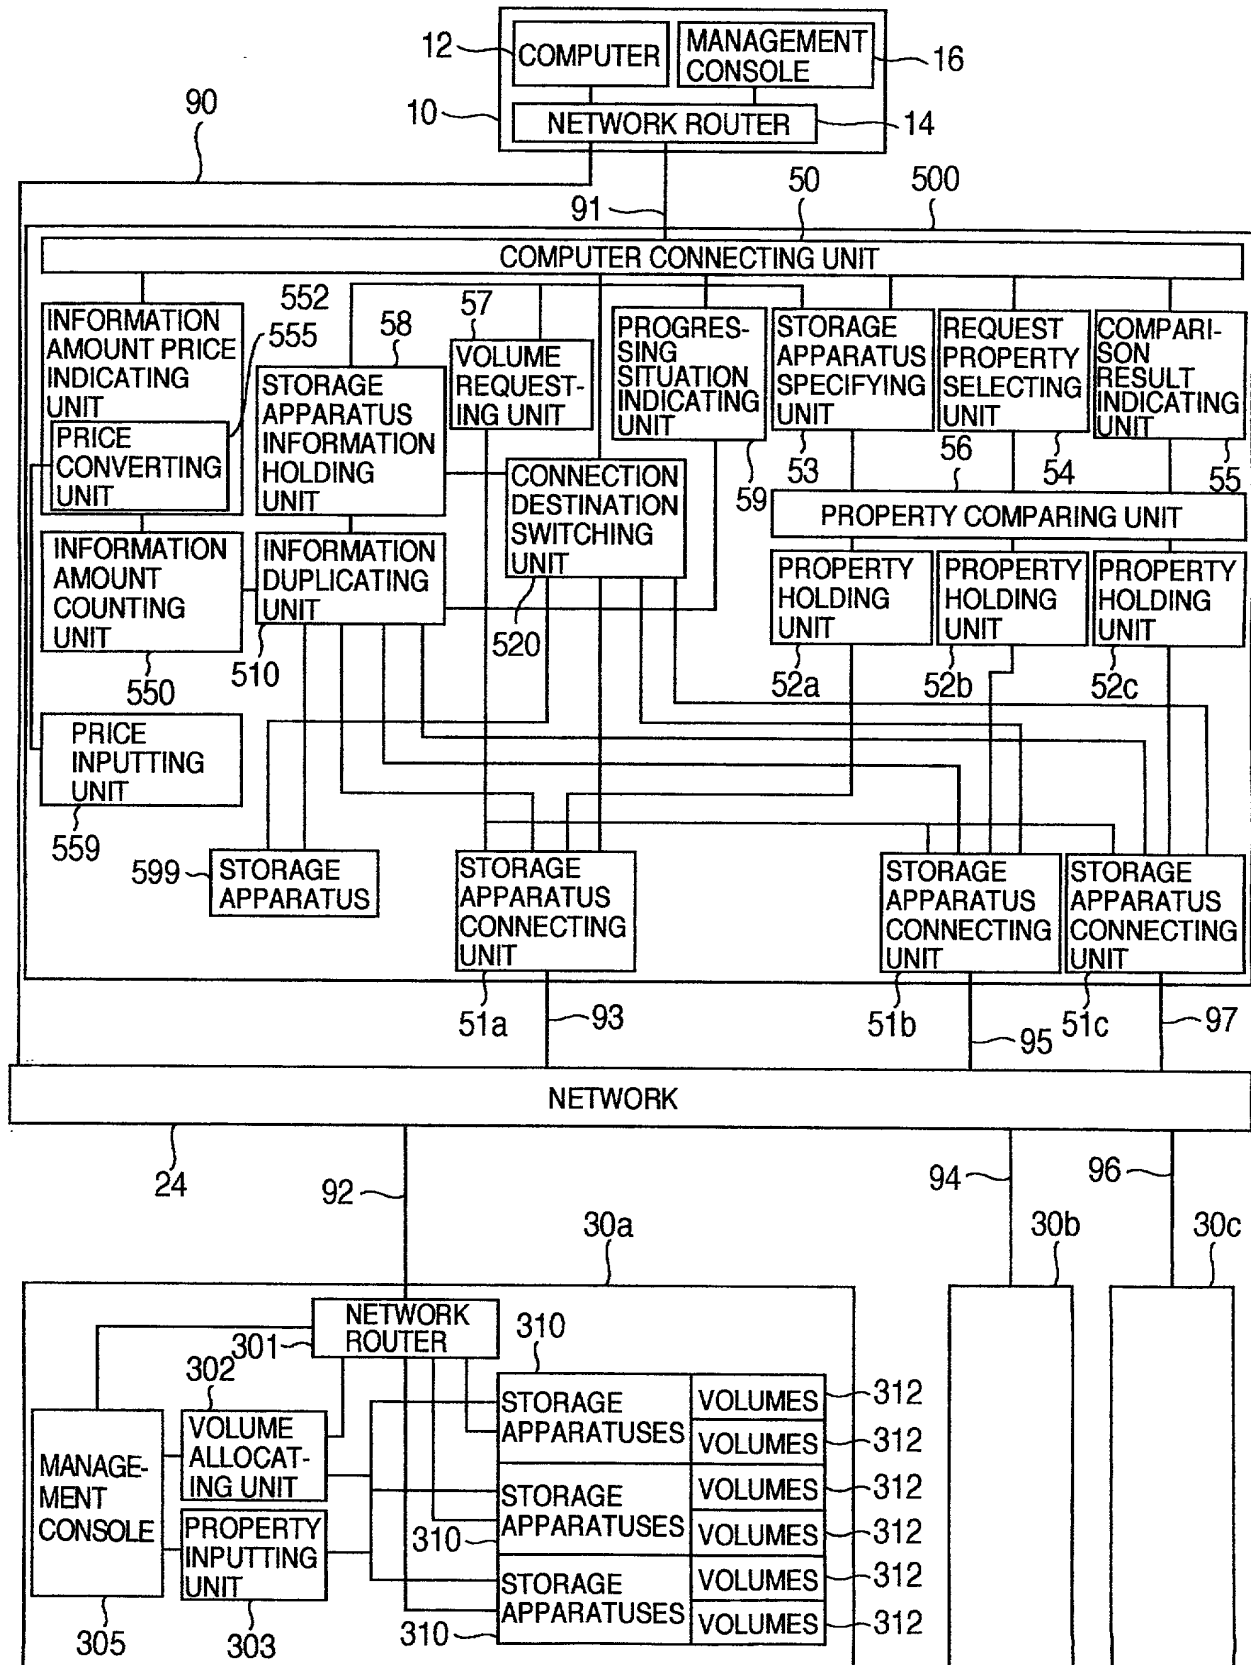


FIG.2

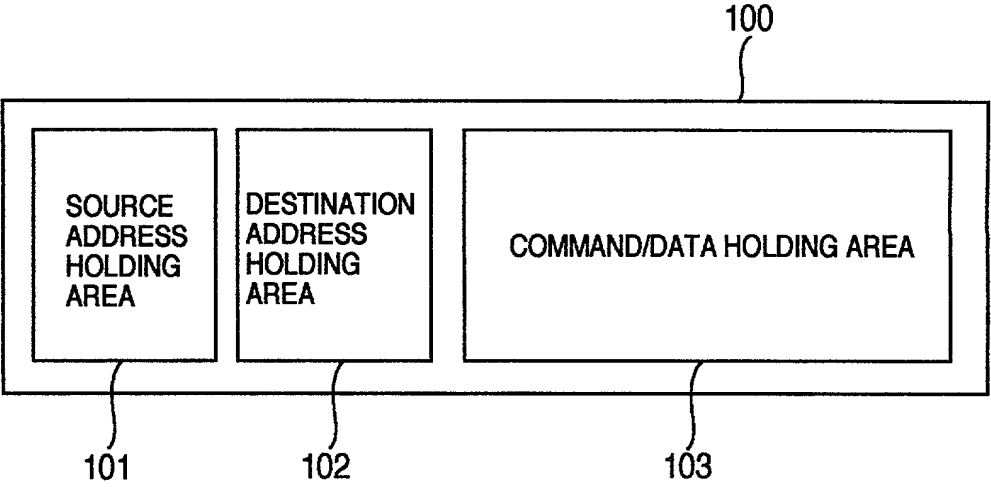


FIG.3

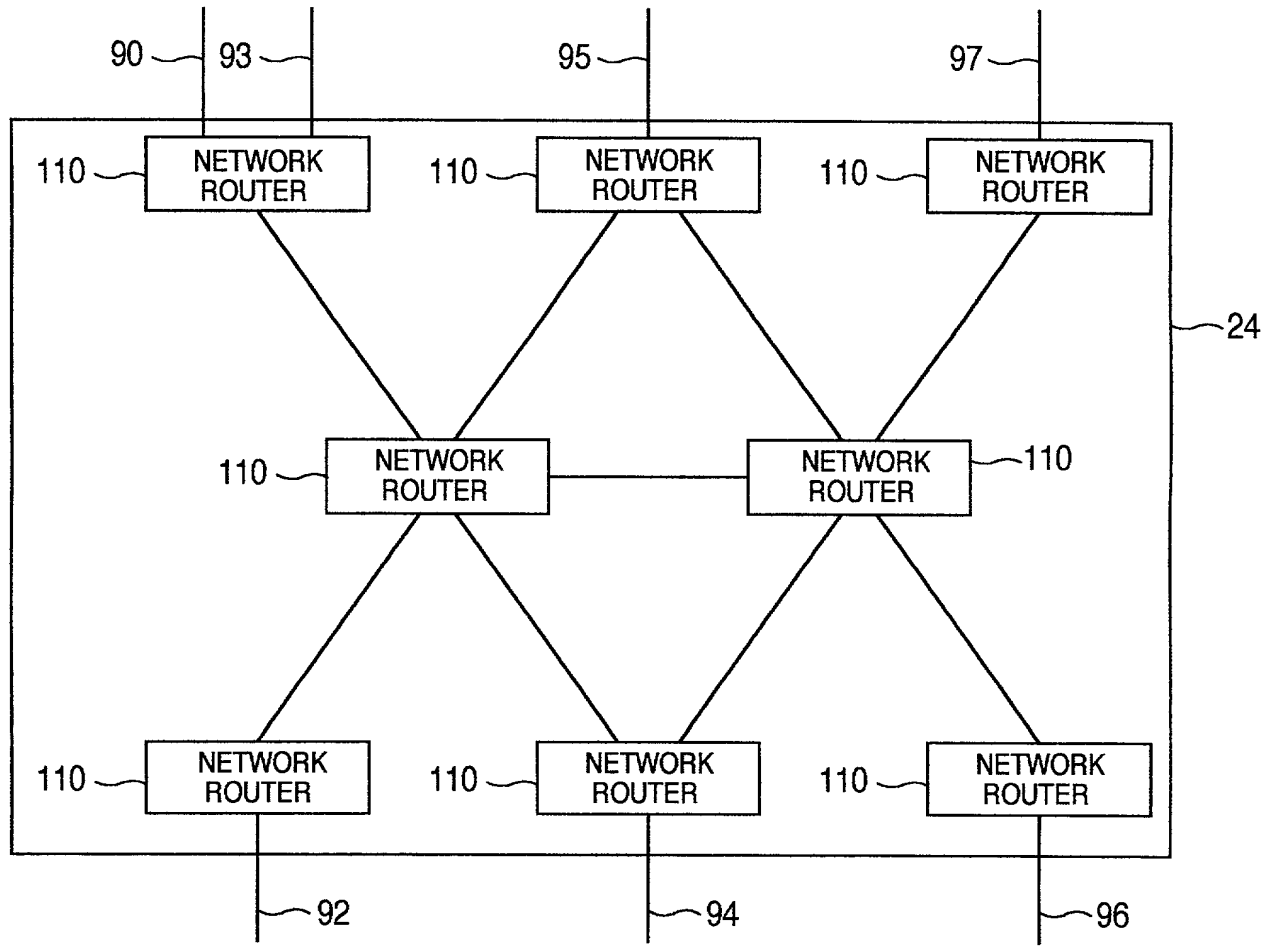


FIG.4

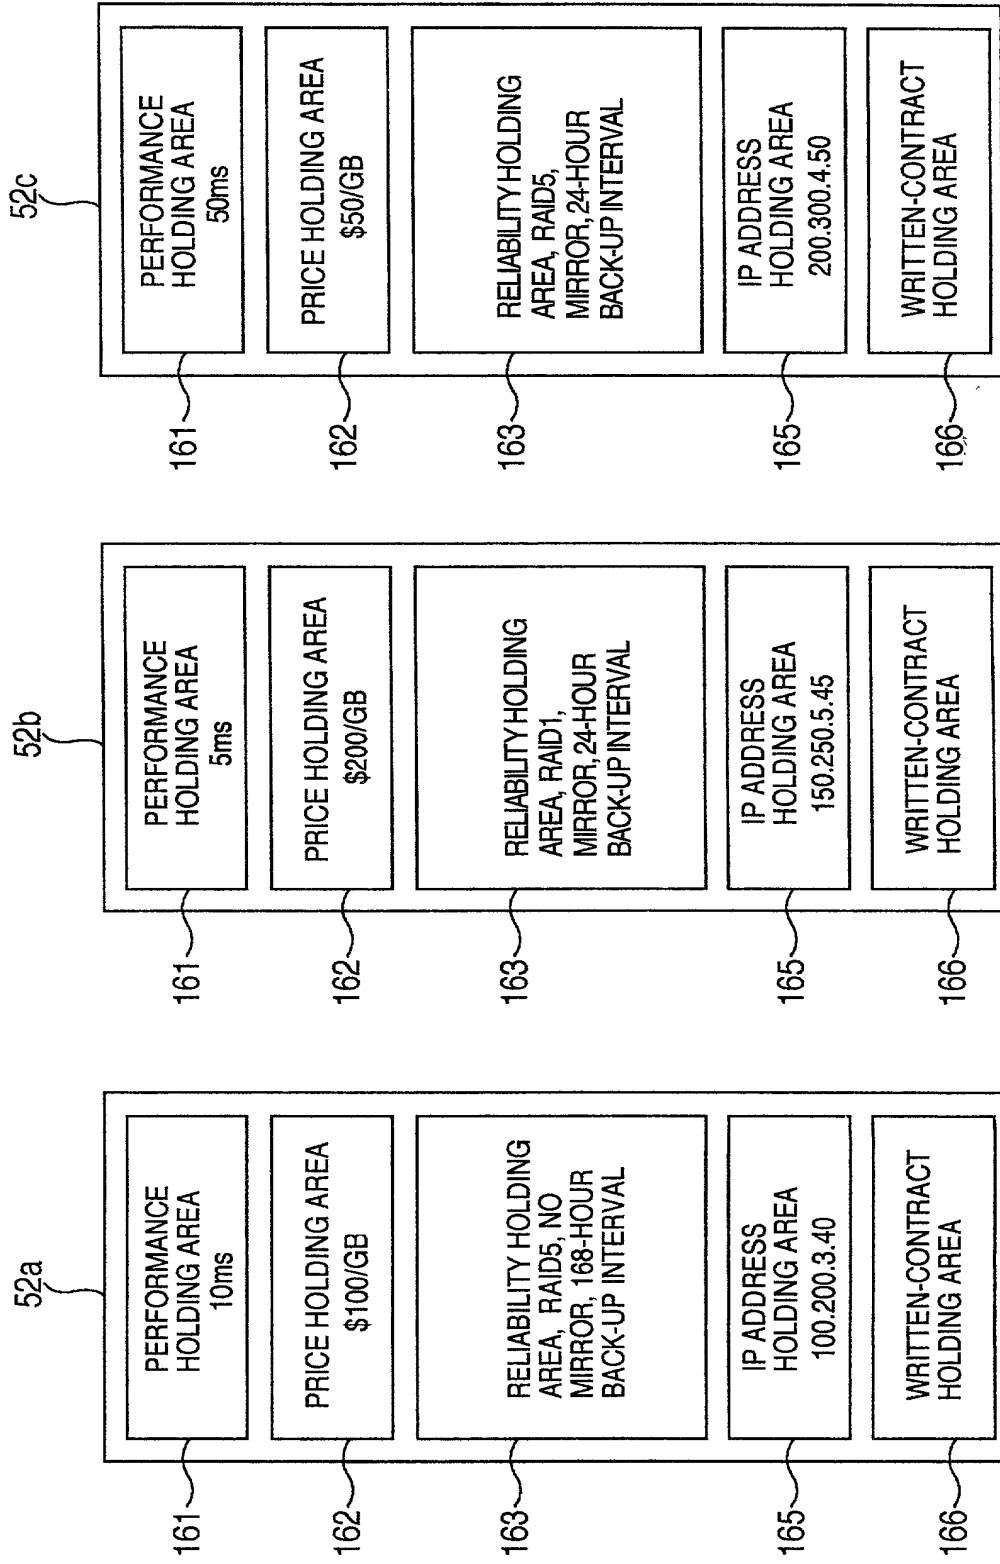


FIG.5

58

	SSP NAME	VALID BIT	IP ADDRESS	VOLUME NUMBER
IN-USE STORAGE APPARATUS				
		:	:	:
MIGRATION DESTINATION STORAGE APPARATUS				
		:	:	:

FIG.6

120

125

PLEASE INPUT THE SSP NAME, THE IP ADDRESS, AND THE VOLUME NUMBER OF AN SSP THAT YOU USE AT PRESENT.

SSP NAME 121

IP ADDRESS 122

VOLUME NUMBER 123

OK 128

CANCEL 129

The diagram shows a rectangular window with a title bar at the top. Inside the window, there is a message box at the top containing the text: "PLEASE INPUT THE SSP NAME, THE IP ADDRESS, AND THE VOLUME NUMBER OF AN SSP THAT YOU USE AT PRESENT." Below the message box, there are three vertically stacked input fields. The first field is labeled "SSP NAME" and is associated with reference numeral 121. The second field is labeled "IP ADDRESS" and is associated with reference numeral 122. The third field is labeled "VOLUME NUMBER" and is associated with reference numeral 123. At the bottom of the window, there are two buttons: "OK" (associated with 128) and "CANCEL" (associated with 129). The entire window is associated with reference numeral 120, and the title bar area is associated with 125.

# FIG.7

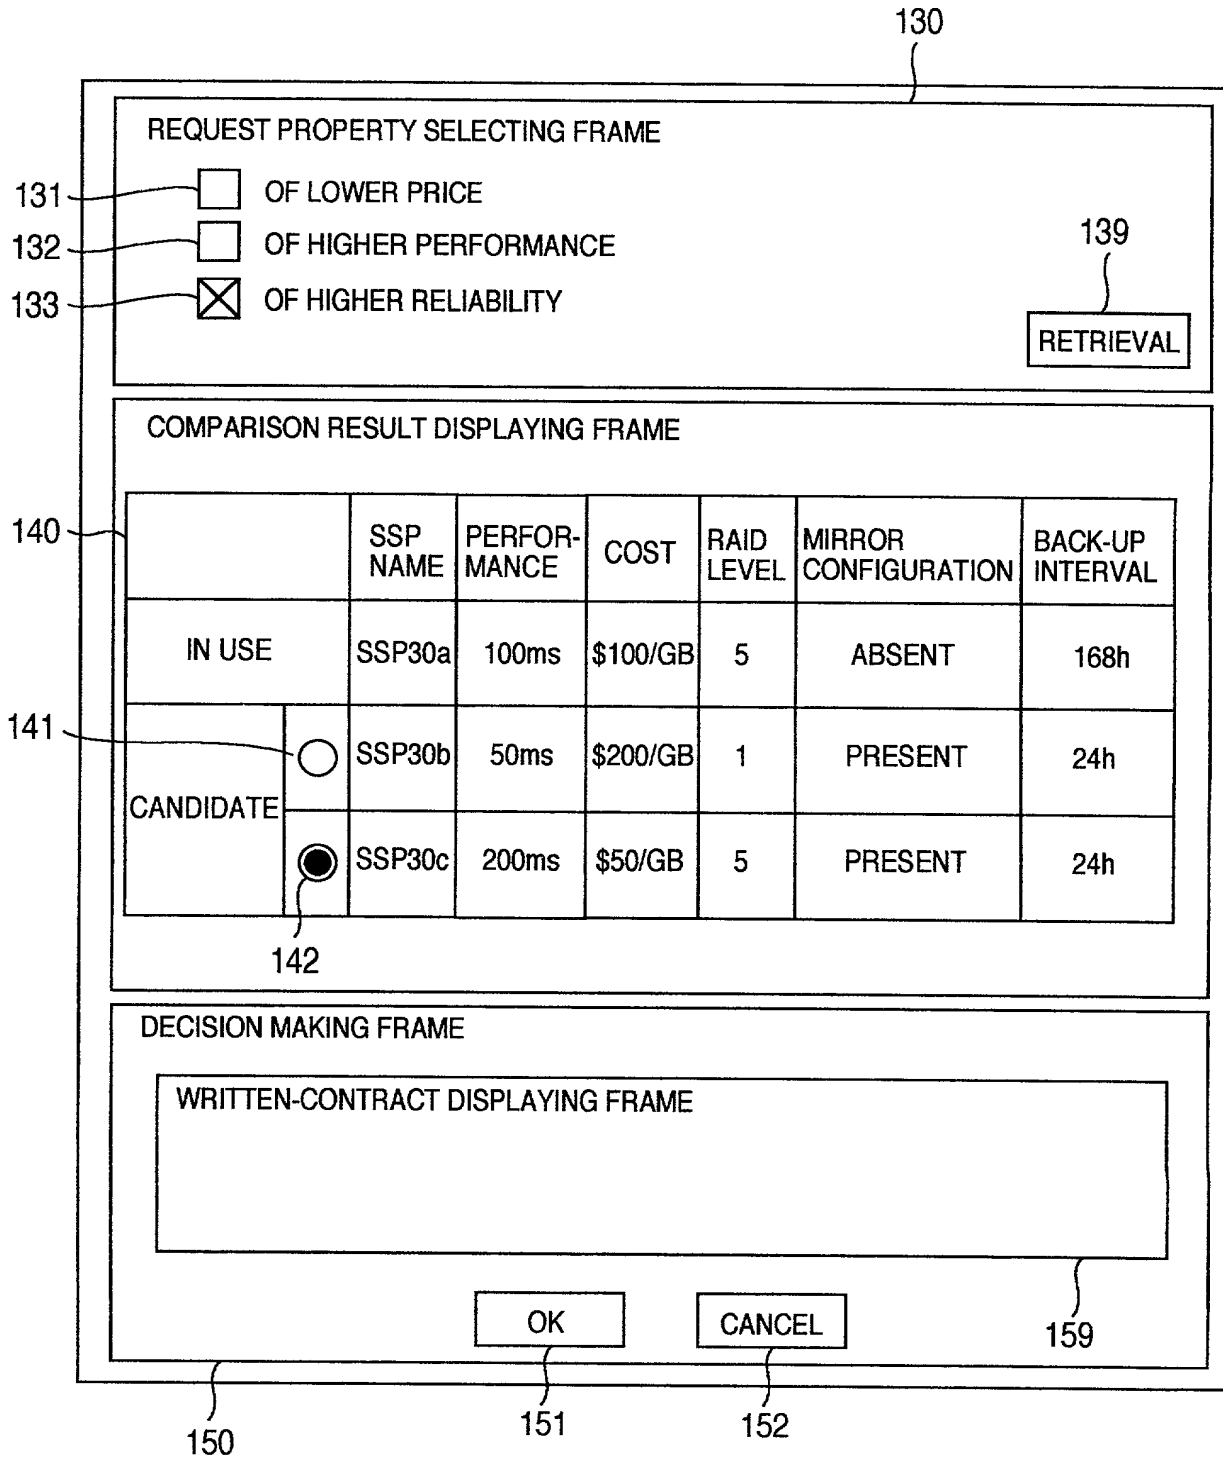


FIG.8

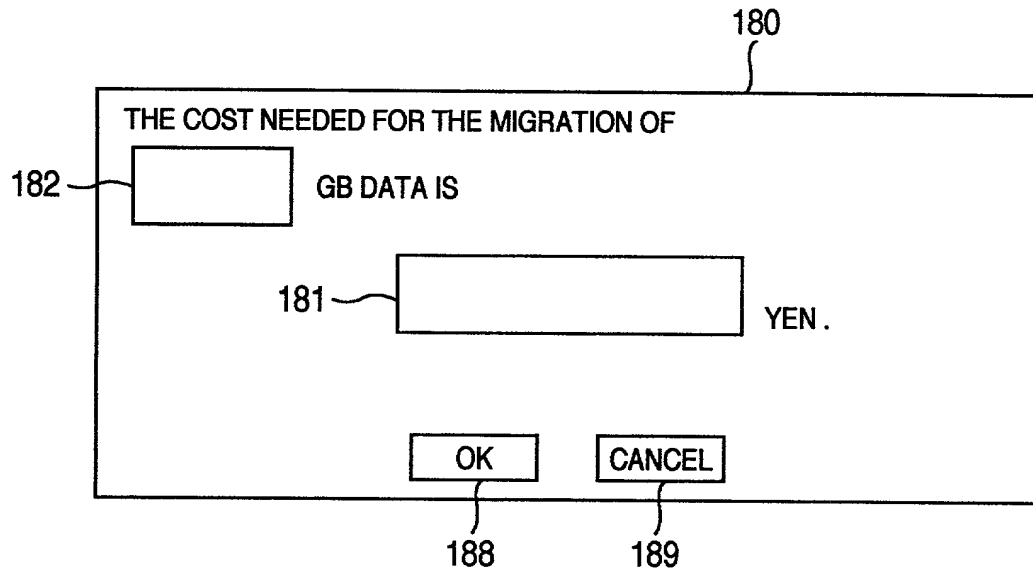




FIG.9

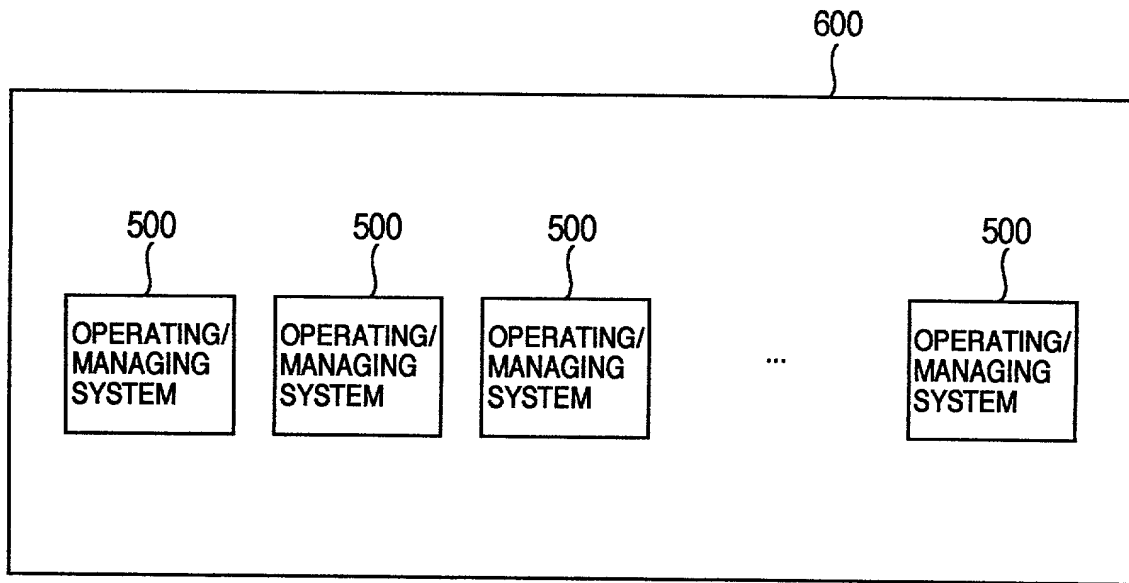


FIG.10



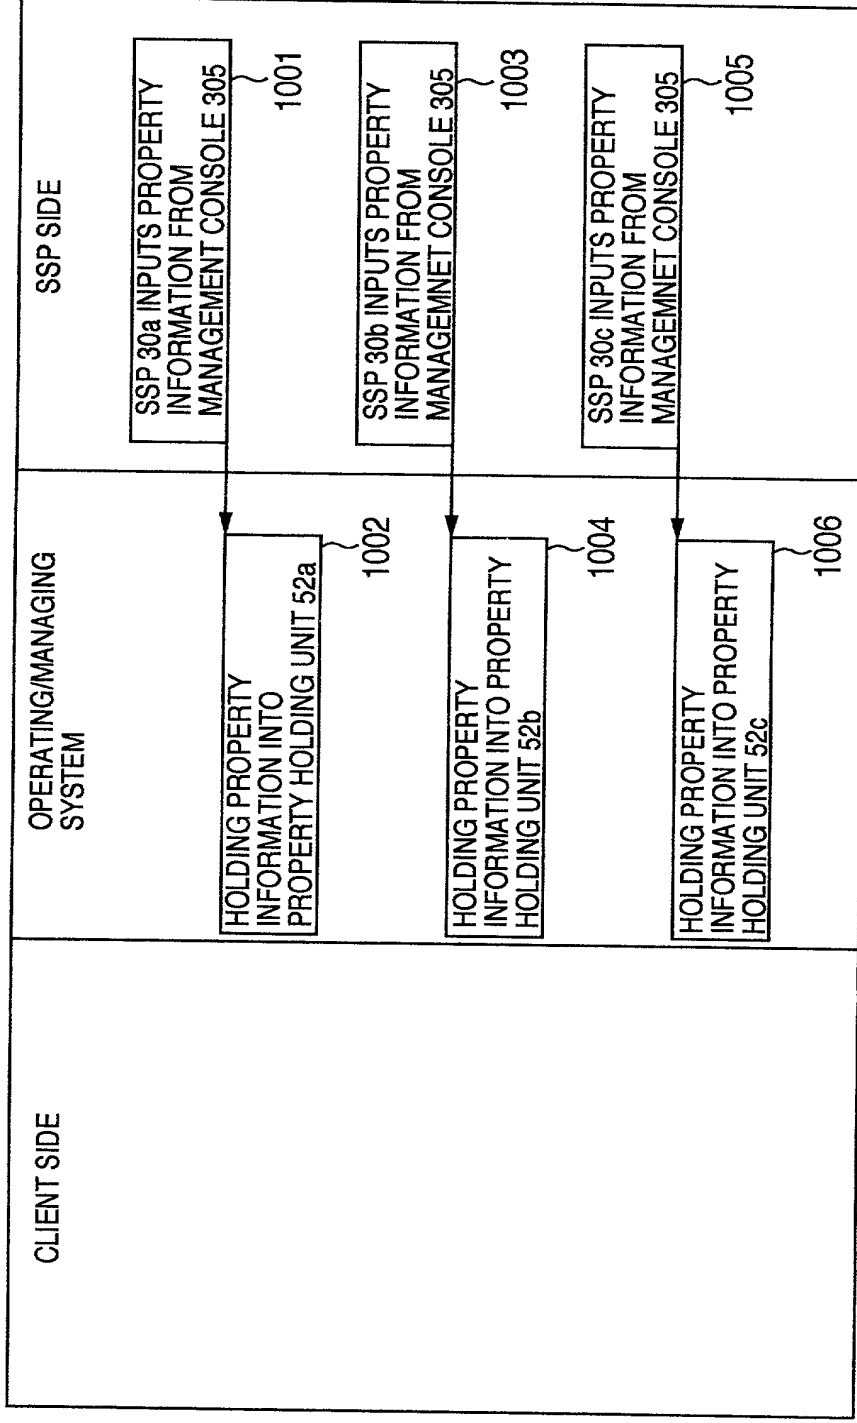


FIG.11

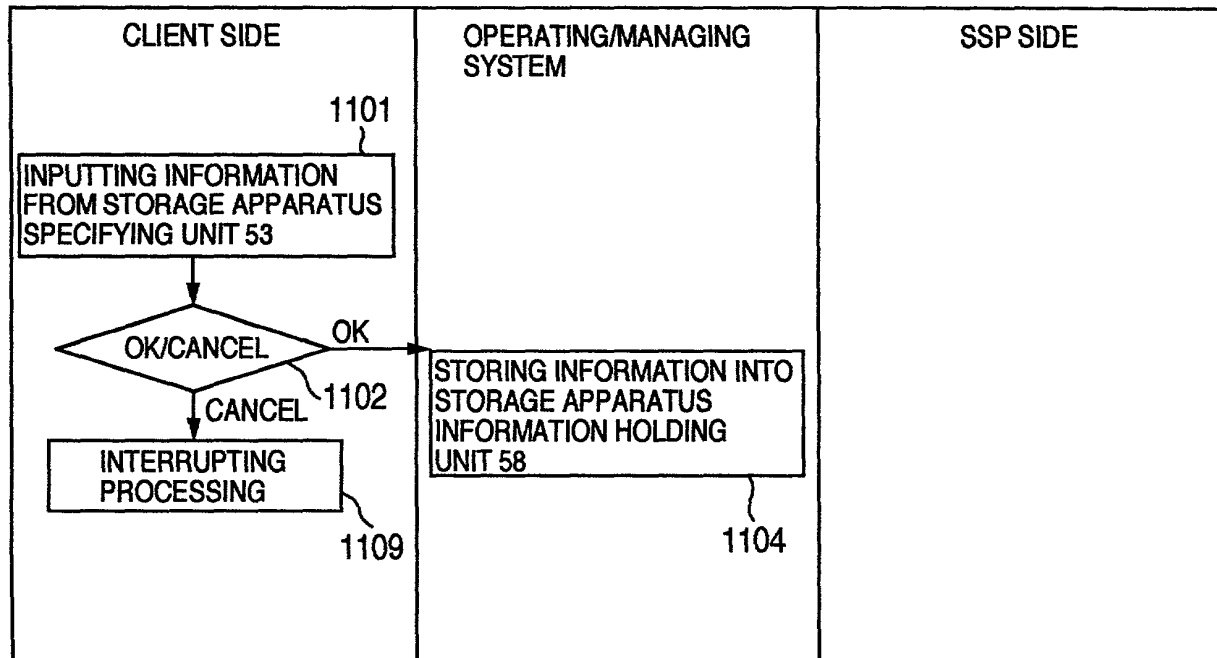

1007007-024202

# FIG.12

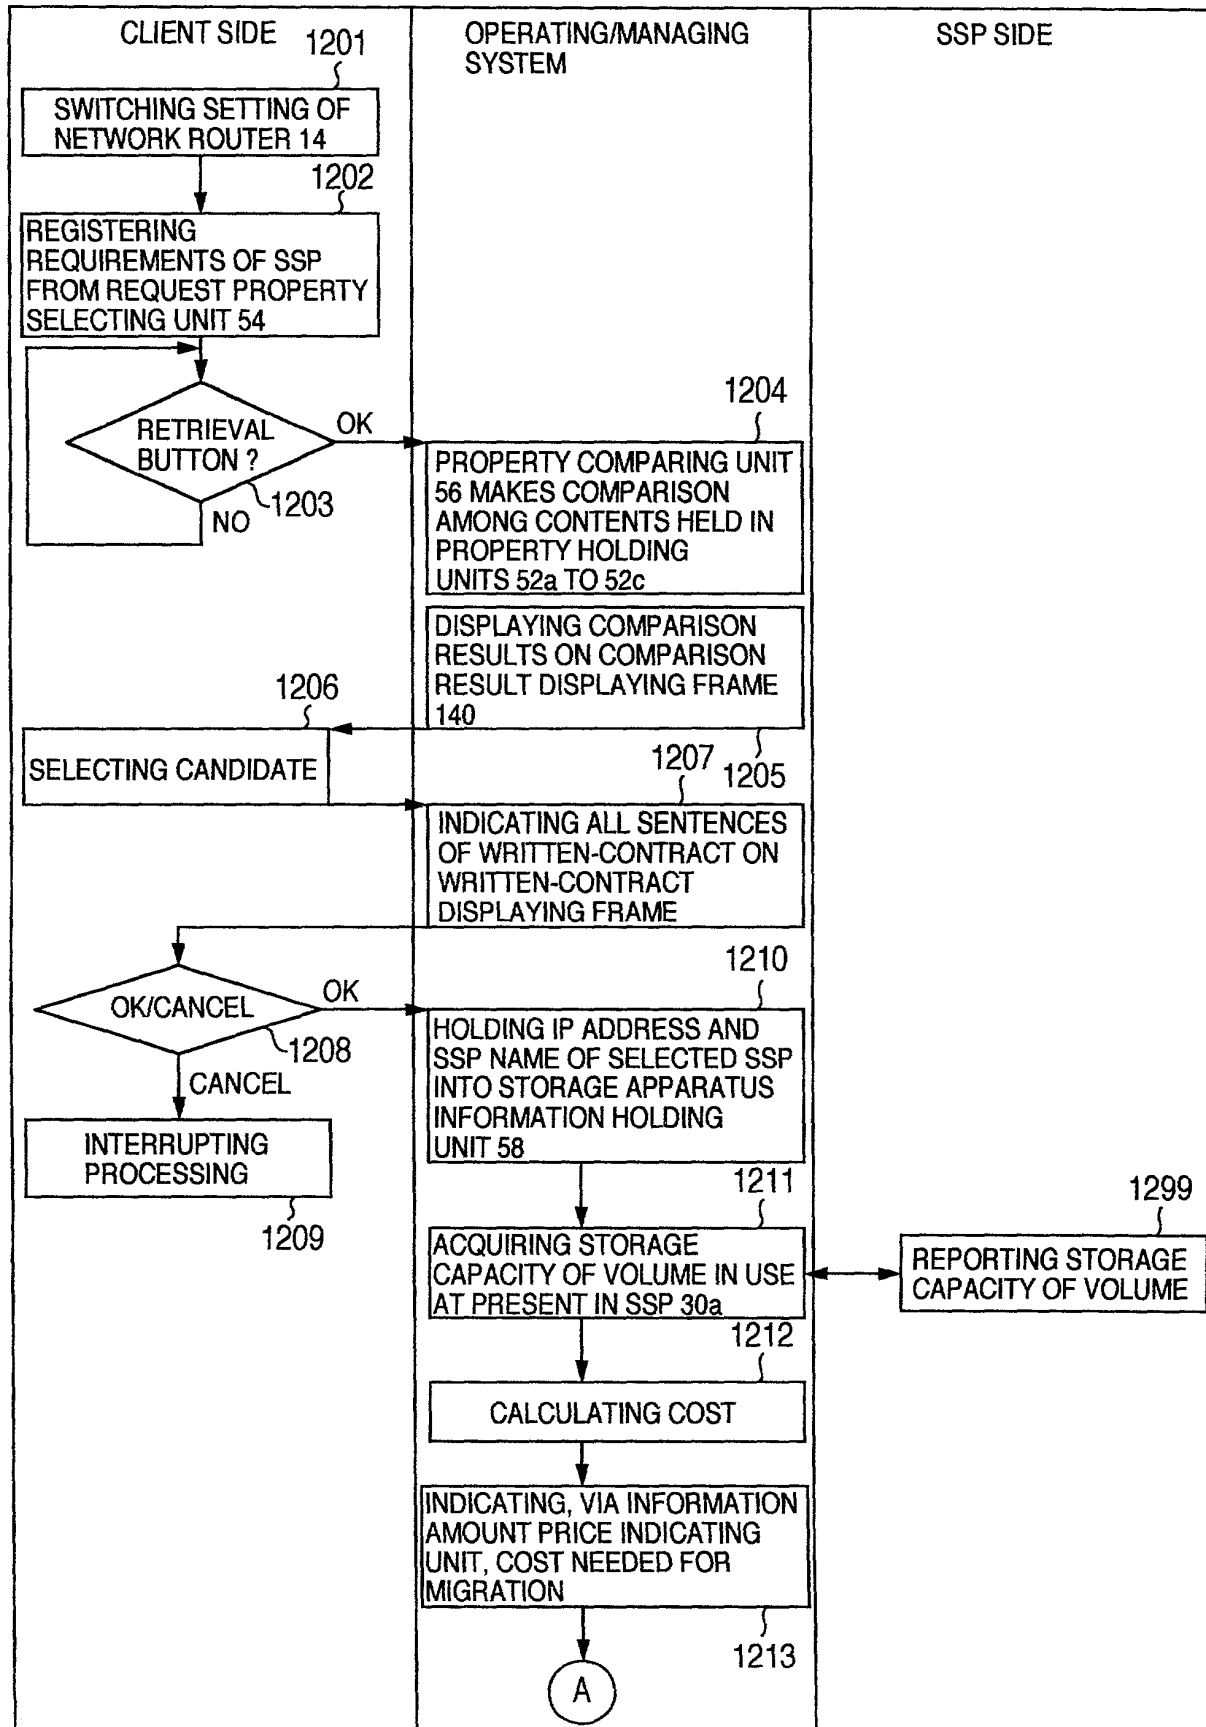

# FIG.13

